


## Spring Check Valve

- Opening pressure:  $< 2\text{Kpa}$  Back pressure:  $> 300\text{Kpa}$
- Used in fluid systems or gas systems to prevent reverse flow

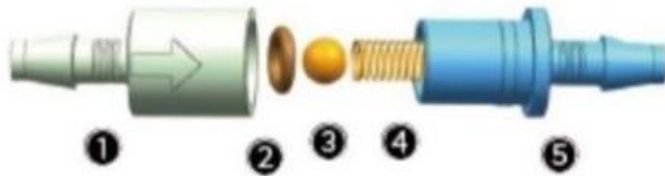

- ① Inlet port
- ② Sealing ring
- ③ Steel ball
- ④ Spring
- ⑤ Outlet port

Dimension (mm)	Model No.	D1	D2	D3	L
	DXF/T-13	1.64	2.61	14.97	23.22
	DXF/T-14	2.32	2.9	15.09	23.03
	DXF/T-19	3.3	4.47	19.66	33.66
	DXF/T-16	4.8	6.53	19.34	37.8
	DXF/T-15 (25)	5.6	7	16.47	44.4
	DXF/T-17 (24, 26)	8	9.88	18.45	40
	DXF/T-18 (35)	10	11.1	20.48	57.62
	DXF/T-36 (73)	12.52	13.5	21.97	62.93

## PVDF Check Valve

Dimension (mm)	Model No.	D1	D2	D3	L
	DXF/P-19	3.28	4.47	19.2	31.1
	DXF/P-16	4.41	6	19.1	43.4
	DXF/P-25	6.02	7.54	19.2	39.37
	DXF/P-17	7.3	10.48	19.12	41.39